

# Pipe Driving Chart

## For Rhino Pneumatic Post Drivers



Pneumatic • Hydraulic • Gasoline  
Professional Grade Tools

All round pipe applications shown are Schedule 40

Refer to the Rhino Chuck Sizing Guide for more information on the chucks listed below.

PIPE SIZE (DN)	Driver	Drive Cap	Master chuck (mm)	Chuck P/N	Adapter (mm)	Adapter P/N	Master chuck (mm)	Master Chuck P/N	Adapter (mm)	Adapter P/N
2 in (50)	PD-45	071260 <b>Required</b>	3" (76)	070591	2-1/2"	070600	N/A		N/A	
	PD-55	071260 <b>Optional</b>	3-7/8"(98.425)	070592	2-1/2"	070611	4-1/4" (108)	070060	2-1/2"(63.5)	070624
	PD-110		4-1/4" (108)	070593	2-1/2"	070624	N/A		N/A	
	PD-140		4-1/4"(108)	070594	2-1/2"	070636	N/A		N/A	
	PD-200		5-1/2"(140)	070746	2-1/2"	070842	7" (178)	070758	2-1/2" (63.5)	070839
2.5 in (65)	PD-45	071261 <b>Required</b>	3" (76)	070591	Not Needed		N/A		N/A	
	PD-55	071261 <b>Required</b>	3-7/8"(98.425)	070592	3" (76)	070610	4-1/4" (108)	070060	3" (76)	070623
	PD-110	071261 <b>Optional</b>	4-1/4" (108)	070593	3" (76)	070623	N/A		N/A	
	PD-140		4-1/4" (108)	070594	3" (76)	070635	N/A		N/A	
	PD-200		5-1/2"	070746	3-1/8"(79)	070782	7" (178)	070758	3-1/8" (79)	070786
3 in (80)	PD-45	N/A	N/A		N/A		N/A		N/A	
	PD-55	071262 <b>Required</b>	3-7/8"(98.425)	070592	Not Needed		4-1/4"(108)	070060	3-5/8" (92)	070622
	PD-110		4-1/4"(108)	070593	3-5/8" (92)	070622	N/A		N/A	
	PD-140		4-1/4"(108)	070594	3-5/8" (92)	070634	N/A		N/A	
	PD-200		5-1/2"(140)	070746	3-3/4" (95)	070783	7" (178)	070758	3-3/4" (95)	070787
3.5 in (90)	PD-45	N/A	N/A		N/A		N/A		N/A	
	PD-55	071263 <b>Required</b>	N/A		N/A		4-1/4" (108)	070060	Not Needed	
	PD-110		4-1/4"(108)	070593	Not Needed		N/A		N/A	
	PD-140		4-1/4"(108)	070594	Not Needed		N/A		N/A	
	PD-200		5-1/2"(140)	070746	4-1/4" (108)	070784	7" (178)	070758	4-1/4" (108)	070788
4 in (100)	PD-45	N/A	N/A		N/A		N/A		N/A	
	PD-55	N/A	N/A		N/A		N/A		N/A	
	PD-110	071264 <b>Required</b>	4-3/4" (120)	070644	Not Needed		N/A		N/A	
	PD-140		4-3/4" (120)	070644	N/A		N/A		N/A	
	PD-200		5-1/2"(140)	070745	4-3/4" (120)	070785	7" (178)		4-3/4" (120)	070789
5 in* (125)	PD-45	071295 <b>Required</b>	N/A		N/A		N/A		N/A	
	PD-55		N/A		N/A		N/A		N/A	
	PD-110		N/A		N/A		7" (178)		5-3/4"(146)	070791
	PD-140		N/A		N/A		7" (178)		5-3/4"(146)	070791
	PD-200		N/A		N/A		7" (178)		5-3/4"(146)	070791
6 in* (150)	PD-45	071306 <b>Required</b>	N/A		N/A		N/A		N/A	
	PD-55		N/A		N/A		N/A		N/A	
	PD-110		N/A		N/A		7" (178)		N/A	
	PD-140		N/A		N/A		7" (178)		N/A	
	PD-200		N/A		N/A		7" (178)		N/A	

\* Indicates the pipe can be driven in certain applications. There is no guarantee expressed or implied by Rhino Tool that the driver will perform the needed task.

**▲ WARNING - Chuck adapter size is important. A chuck adapter that is too large for the post being driven may cause the post driver to fall from the post, potentially causing serious injury to the operator or bystanders.**